


INBOARDS AND OUTDRIVES ENGINE CHECKLIST

Pre-start checks

- 1. Bilge blower
- 2. Visual check
- 3. Fuel and fuel tap
- 4. Fuel filter
- **5.** Engine oil level

- **6.** Gearbox oil level
- **7.** Raw water filter and sea cock
- 8. Fresh water level
- 9. Battery switch

- 10. Stern gland greaser
- 11. Hydraulic fluid
- 12. Outdrive leg
- **13.** Instruments working?
- 14. Out of gear

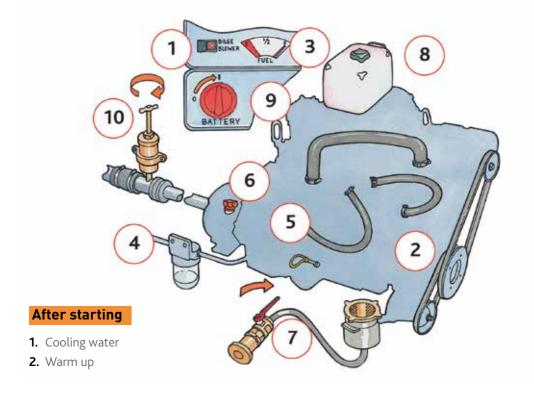



Pre-start checks

1. Bilge blower

If you have a bilge blower or engine room extractor fan, run it for a few minutes before starting the engine.

2. Visual check

Check belts and hoses for cuts, splits or fraying, and look out for oil or coolant leaks.

3. Fuel

Make sure you have enough fuel for your intended trip, plus a reserve of about 20% of the tank's capacity, and make sure the fuel tap is open.

4. Fuel filter

Some boats have a transparent water separator/filter in the fuel line. Inspect the bowl for water or dirt, and drain off any visible contamination.

5. Engine oil

Check the engine oil level with the dipstick, and top up if necessary to keep the level between the 'max' and 'min' marks.

6. Gearbox oil

Check the engine oil level with the dipstick.

NOTE: Some gearbox oil levels can only be checked with the engine running. Many gearboxes need special oil: **engine oil will not do!**

7. Raw water filter

Shut the cooling water seacock; remove the filter element and clean it if necessary. Replace the element, screw the lid back onto the filter body, and *open the sea cock*.

8. Fresh water level

Some engines have fresh water cooling systems as well as raw water. Carefully remove the header tank cap, and top up with water/anti-freeze mixture if necessary to bring the level within about 50mm of the top. Replace the header tank cap.

9. Battery switch

Turn the battery switch on before starting. Do not switch it off while the engine is running.

10. Stern gland greaser

Boats with 'traditional' transmission systems have stern gland greasers. Give the cap or handle one full turn.

- **11.** If your boat has an outdrive engine, trim tabs, or power steering, check the level of the hydraulic fluid in the hydraulic reservoirs and top up if necessary.
- **12.** If your boat has an outdrive engine, check that the leg is clear of weed, rope, plastic bags, etc and is fully down.

After starting

- 1. Immediately check that there is a good flow of water from the exhaust pipe or cooling water tell-tale.
- 2. Allow the engine to warm up so that it will tick-over smoothly before setting off.

